

EM-00001

EM-00001 - DALI

#### Precautions and Warnings

- •Read all instructions carefully, the safety of this product is only guaranteed if the instructions are followed, retain these instructions for future use.
- •Turn off the power suppler before installation and maintenance.
- •Installation must be carried out be a trained professional in accordance with all National electrical' codes and regulations.
- •To avoid the risk of fire and overheating, make sure all connection, including those made by others, are correct and secure.
- •Do not pinch or apply excessive tension on the electrical wires. Damage due to improper handling and installation will void the warranty.
- •If any there is any damage to the product or the cable, the product must be returned to the retailer or manufacturer.





#### **Electrical Specification**

Input power (MAX):	6W (Maintained, 3.5W Non)
Frequency:	50/60Hz
Input voltage:	200-240V
Discharge efficiency:	≥80%
Output power:	1.7W ±0.3W
Power factor:	≥0.3%

Rated input current:	≥0.03A
Full load output voltage:	DC2.8-3.2V
Output current range:	585mA ± 25mA
Surge:	0.5KV
Withstand voltage:	AC3750V
Short circuit protection:	Pass
Over voltage production:	Pass

Light Forms	LightForms.com	8 Richfield Avenue	Т	+44 (0)20 8571 3785
UK Head Office		Reading	Е	London@
		RG1 8EQ		LightForms.com


# **Emergency Track**

## Installation / Maintenance Instructions

## **LIGHT FORMS**





Press the battery button to set it to ON.
Select the luminiaire to be MAINTAINED or NON-MAIN-

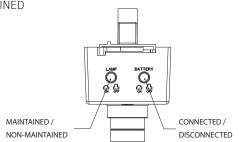





  Prior to fitting to track: Position the locking levers as shown.







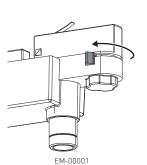

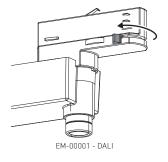




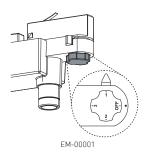


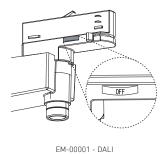



  Lock the fitting to the track: Position the locking levers as shown.





EM-00001 - DALI





5

Select the correct circuit. Indicator will turn green when correct circuit is selected.






\_

EM-00001 - DALI



Turn on power.

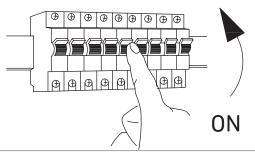

**Light Forms**UK Head Office

LightForms.com

8 Richfield Avenue Reading RG1 8EQ

T +44 (0)20 8571 3785 E London@


LightForms.com


# Emergency Track
 
# Installation / Maintenance Instructions


## **LIGHT FORMS**


#### **Dimensions**

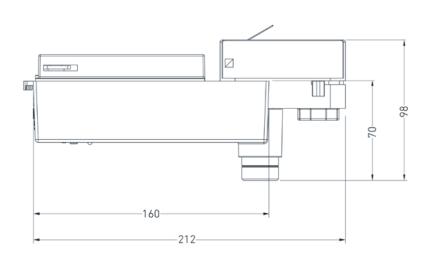



EM-00001

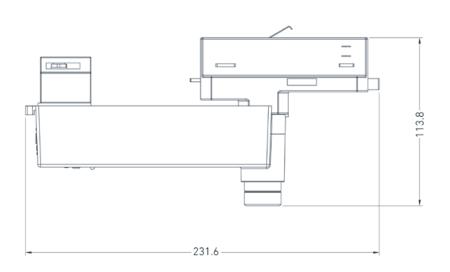

 

EM-00001 - DALI


Light Forms		
UK Head Office		

# Emergency Track Installation / Maintenance Instructions
 
## **LIGHT FORMS**

#### Instructions for Automatic Testing

- •Once the unit is powered up, a self diagnostics test will run automatically.
- •Note the Status Indicator and Status from the table below.
- •When the fault is corrected, press the test button for two seconds. The Red indicator will turn Green.
- •It is possible to use the Test Button to perform manual tests.
- •Run three Min duration test every month.
- •Run one hour or three hour duration test every year.



#### **AUTO Test**

Green: Solid:	System 0K
Red: Solid:	Requires Service
Green: one flash, 4s pause:	Battery disconnected
Green: two flash, 4s pause:	Low battery voltage
Green: three flash, 4s pause:	Charge board fault
Green: four flash, 4s pause:	AC/DC transfer fault
Green: five flash, 4s pause:	LED lamp fault

#### **MANUAL Test**

Press test button once:	Run a 30s duration test
Press test button twice in 2s:	Run a three Min duration test
Press test button three times in 2s:	Run a 30 Min duration test
Press test button three times in 2s:	Run a one hour or three hour duration test
Press and hold test button for 2s	Fault clear and reset

#### **DALI Test**

Green: Solid:			System OK
Green: 0.1s flash, 0.1	s pause:		Function test underway
Green: 1s flash, 1s pa	ause:		Duration test underway
Red: Solid:			Load failure
Red: 0.1s flash, 0.1s	pause:		Battery failure
Red: 1s flash, 1s pau	se:		Charging Failure
Green: Double Pulse:			Inhibit Mode
Green and Red: OFF			Emergency Mode
<b>Light Forms</b> UK Head Office	LightForms.com	8 Richfield Avenue Reading RG1 8EQ	T +44 (0)20 8571 3785 E London@ LightForms.com